



Step 1: Install **SR NFC Tool** app on your phone (search SR NFC Tool from Apple Store or Google Play), and add the device following the app instructions.

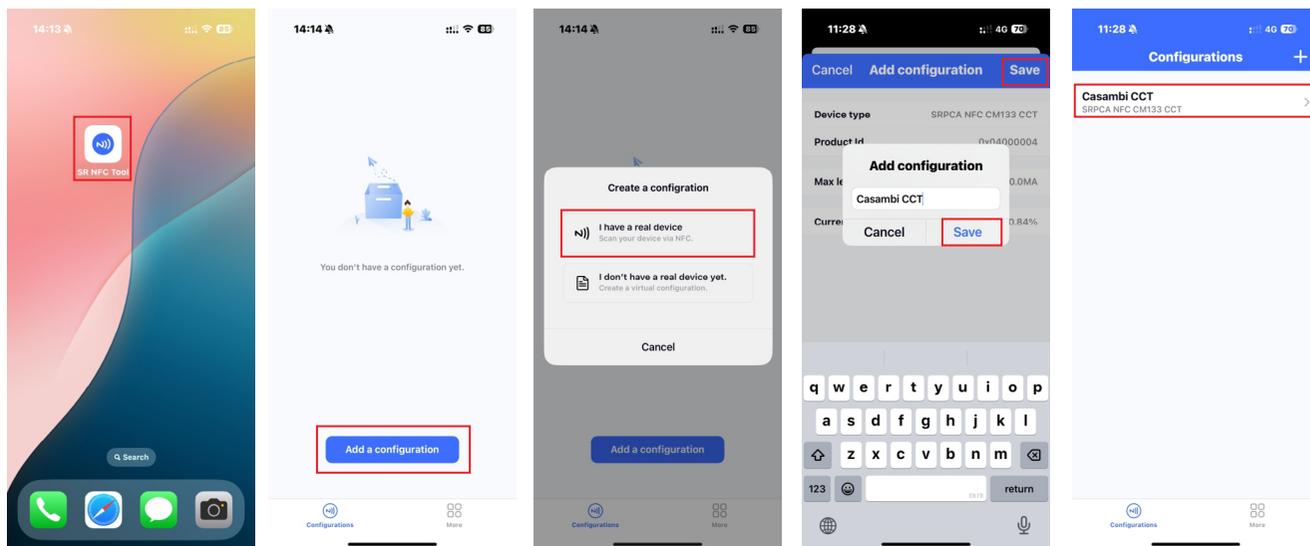

Step 3: After setting, write all configurations to the device.

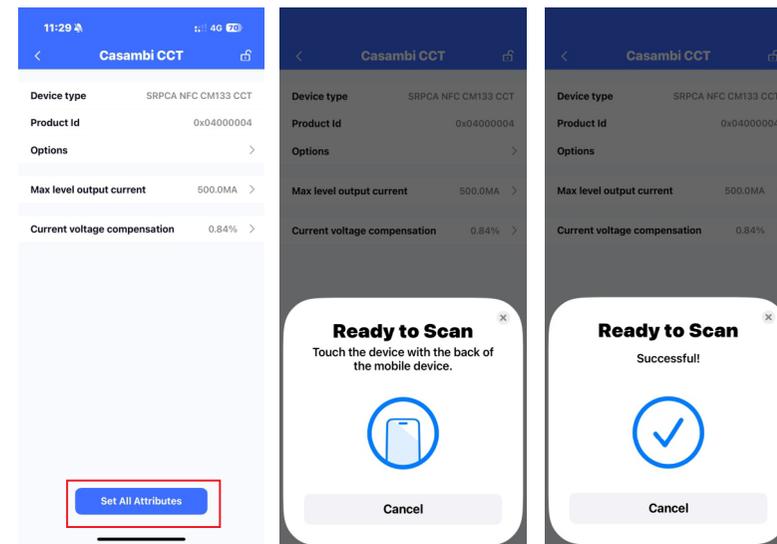

Step 2: Unlock the device and set the wanted parameters.

