


SUNRICHER

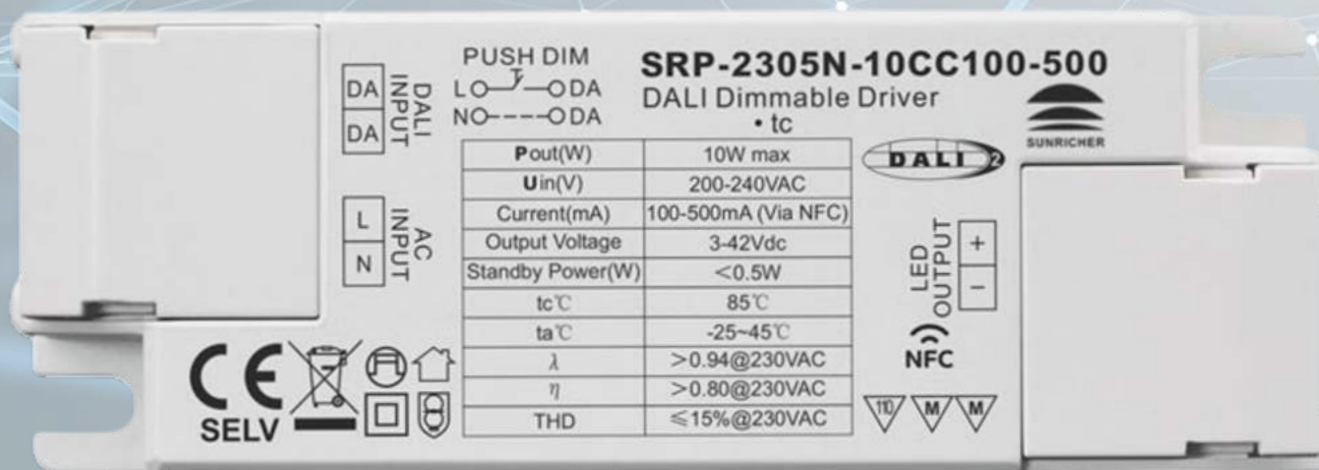

**5 YEAR
WARRANTY**

10W

Compact Constant Current LED Driver with DALI-2 NFC

Features of the:
SRP-2305N-10CC100-500



Constant
Current



PushDimming
(VAC)



DALI 2 Protocol



Low level
dimming with
0.1 Dimming



NFC
Compatible




Class II Power
Supply

CE IP20 SELV

Specification


Model		SRP-2305N-10CC100-500
Output	DC Voltage Range	3 ~ 42V
	Rated current	100-500mA via NFC setting; Min.current gear lower to 0.1mA
	Current Accuracy	±3% (±1% @ Certain full load) @ full load
	Rated power	10W
Input	Voltage Range	220-240VAC
	Frequency range	50/60Hz
	Power Factor (Typ.)	> 0.94 @ 230VAC Full load
	Total Harmonic Distortion	THD ≤ 15% (@ full load / 230VAC)
	Efficiency (Typ.)	80% @ 230VAC full load
	AC Current (Max)	0.1A @ 230VAC
	Inrush Current (Typ.)	Max. 4.32A at 230VAC; 80µs duration
	Leakage current	< 5mA/230VAC
	Standby Power Consumption	< 0.5W
Control	Anti Surge	L-N: 2KV
	Dimming Interface	DALI Device Type 6 (DALI consumption < 2mA)/ AC Push
	Dimming Range	0.01%-100% @Max current
	Dimming Method	Amplitude/CCR dimming
Protection	Dimming Curve	Linear/ Logarithmic optional
	Short Circuit	Yes, recovers automatically after fault condition is removed
	Over Current	Yes, recovers automatically after fault condition is removed
	Over Temperature	Yes, recovers automatically after temperature drop
Environment	Working TEMP.	-25°C ~ +45°C
	Max. Case Temp	TC=85°C (Ta="45°C")
	Working humidity	10%-95% RH (non-condensing)
	Storage TEMP humidity	40°C ~ +80°C, 10% ~ 95% RH
Safety & EMC	Safety standards	EN61347-1, EN61347-2-13
	Withstand voltage	I/P-O/P: 3.75KVAC
	Isolation resistance	I/P-O/P: 100MΩ/500VDC/25°C/70% RH
	EMC emissions	EN55015, EN61000-3-2, EN61000-3-3
	EMC Immunity	EN61547, EN61000-4-2,3,4,5,6,8,11
Others	Size	101*36*25 mm (L*W*H)
	Weight	0.15kgs
	Warranty	5 Years
Notes	1. DO NOT install with power applied to the device. 2. DO NOT expose the device to moisture.	

Mechanical Specification

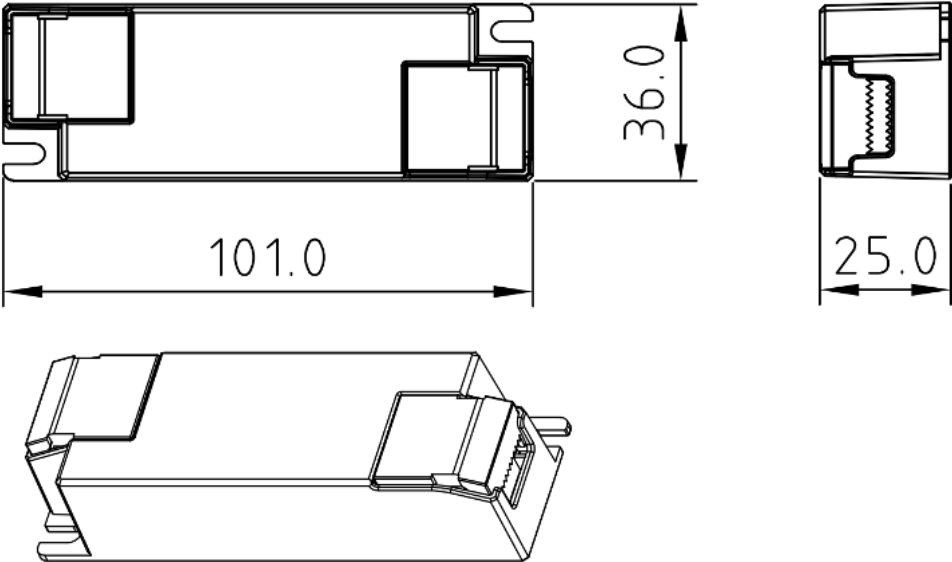


- Input Voltage Terminal: 2 pole terminal (same as the diagram)
- DALI or PUSH Dim Terminals: 2 pole terminals
- Output LED's: 2 pole terminal block: Positive (+), Negative (-)

DALI

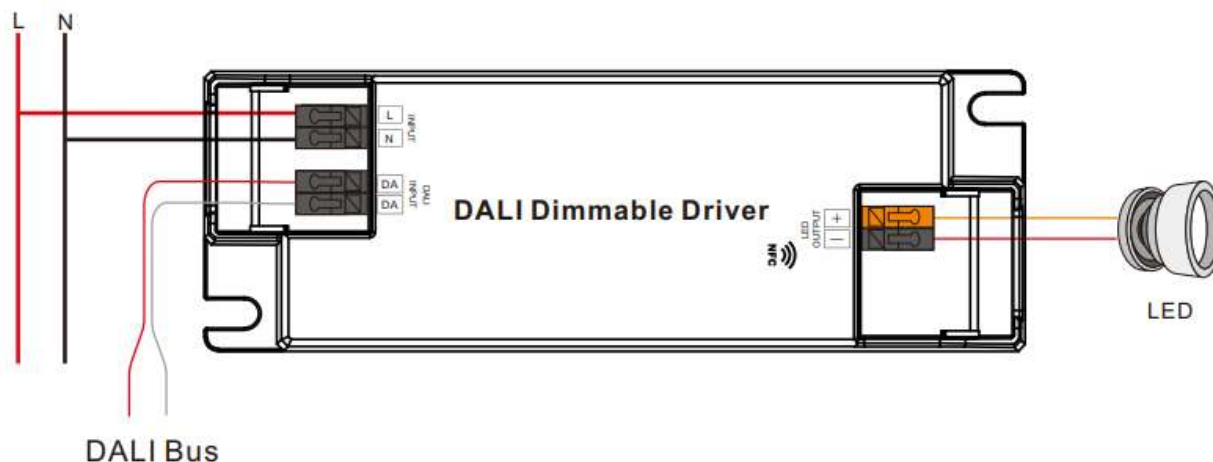

Push Dimming

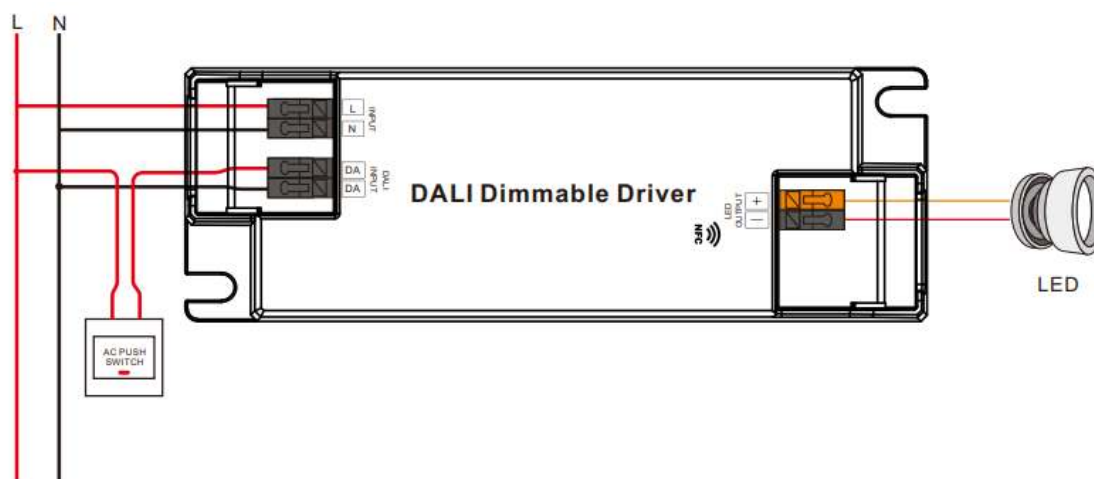

Operation

With DALI Master:

1. DALI Address

- 1 DALI address for 1 channel output are assigned by DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations


With NFC Programming Devices:

Note:

1. Do wiring according to the wiring diagram and power on the DALI system
2. Recommend setting parameters without power-on the DALI devices
3. Please make sure your mobile phone has NFC function and enable it


Wiring Diagrams & Dimming

Operating Window

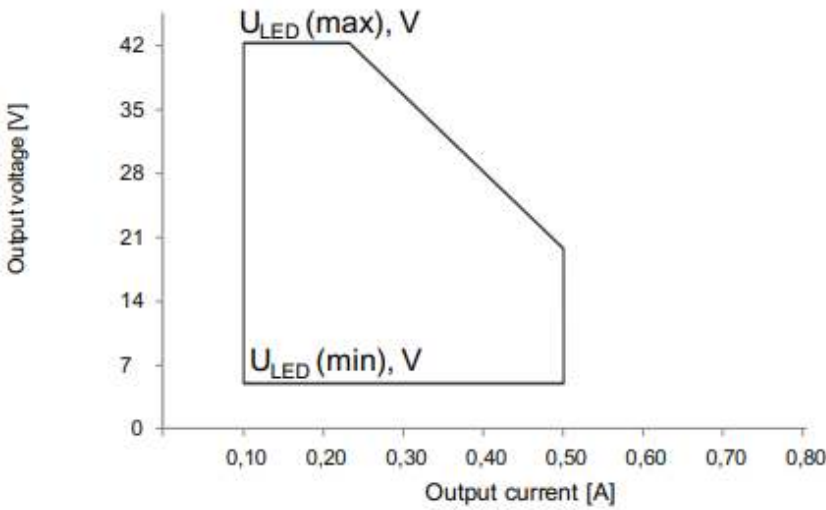

MCB Load Quality

Module Number	I _{peak}	T _{width}	Max. quantity of LED Driver per MCB														
			B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
SRP-2305N-10CC100-500	4.32A	80µs	34	45	55	69	88	57	75	92	115	144	80	104	128	160	200
SRP-2309N-10CCT100-500	4.32A	80µs	34	45	55	69	88	57	75	92	115	144	80	104	128	160	200

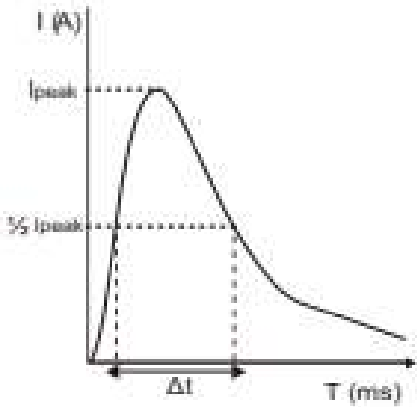


Note:


1. Those MCB parameters are based on ABB S200 series circuit breakers.
2. For different brands and models of miniature circuit breakers, the quantity of drivers will have difference.
3. Please do not exceed the above-mentioned quantity during on-site installation, and the specific load quantity shall be subject to on-site installation.
4. When the installation environment temperature of MCBs exceeds 30°C or when multiple MCBs are installed side by side, the number of mounted drives will be reduced, which requires recalculation.
5. Type C MCB's are strongly recommended to use with LED lighting

Operation - Working with 'SR NFC Tool' App

Step 1: Download the APP (searching "SR NFC Tool" from App Store and Google Play) . Open APP.

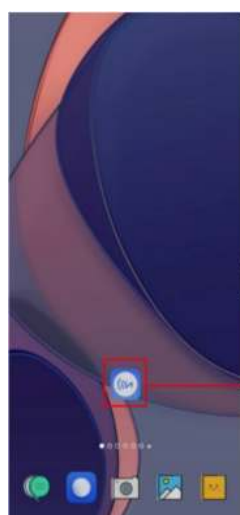




Download
"SR NFC
Tool"

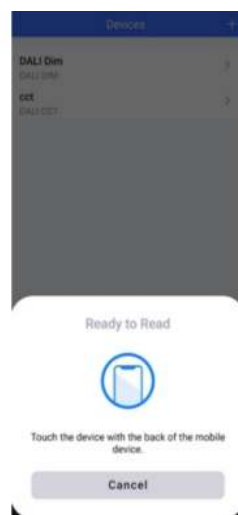

Note:

1. Please make sure that you have enabled NFC function with your mobile phone/ tablet.
2. Please make sure that the "NFC position" is matched.
3. Please do not power on the device before setting.
4. Please If you can't download "SR NFC Tool". Please contact with us
5. Please refer to QR code below

Step 2: Add device, and name it as you wish.

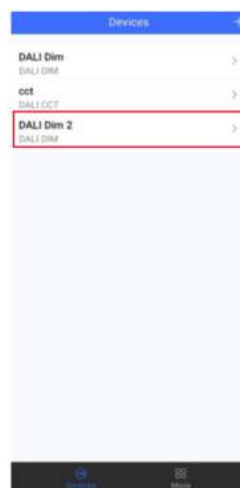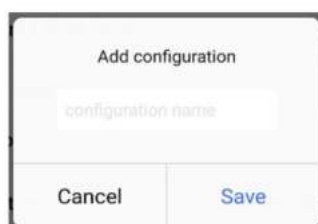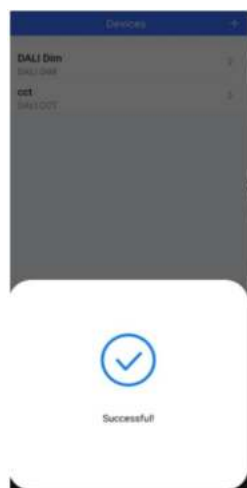

Apple QR Code:




Android QR Code:




Step 3: Unlock device, enter parameters configuring page.



Locked

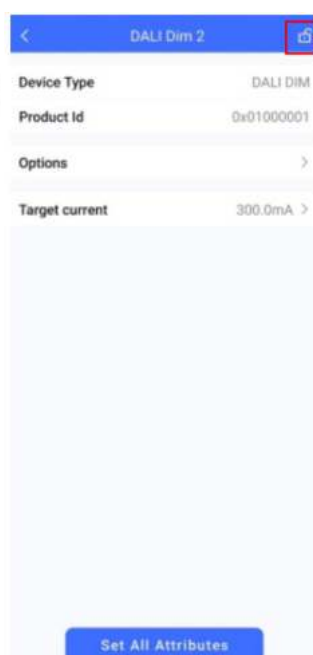

Unlock it

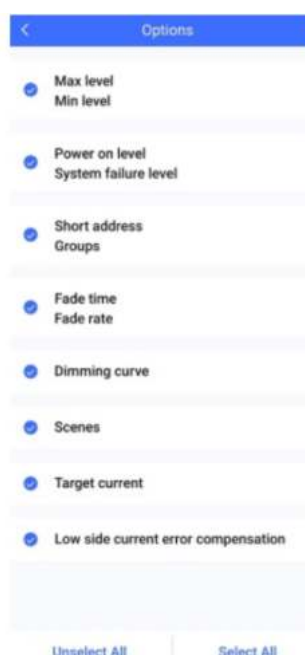

Notes:

1. You have to unlock the device then do some settings
2. Only when the corresponding function is selected, the function interface will be displayed.

Operation

Step 4: Few parameter interface, you can choose the setting based on your requirements.

The image displays five sequential screenshots of the DALI Dim 2 configuration interface. Each screen has a blue header with a back arrow, the title 'DALI Dim 2', and a share icon. The first screen shows a list of parameters on the left (Device Type, Product Id, Options, Max level, Min level, Power on level, System failure level, Short address, Groups, Fade time, Fade rate, Dimming curve, Scenes) and a 'Set All Attributes' button at the bottom. The subsequent four screens show specific configuration options: 'Level' (with a slider from 0 to 255), 'System failure level' (with a slider from 0 to 255), 'Fade rate' (with a slider from 1 to 15), and 'Groups' (with a grid of 16 buttons). Each of these four screens also has 'Read' and 'Write' buttons at the bottom.

Step 5: After setting, please save the selected configuration via NFC and power on the device


The image displays four sequential screenshots of the configuration process. The first screen shows a list of 16 scenes (Scene 0 to Scene 15) with a 'Read' and 'Write' button at the bottom. The second screen shows the 'Target current' setting with a value of 3000 and a 'Value range 1000-50000' note, with 'Read' and 'Write' buttons at the bottom. The third screen shows a 'Ready to Write' prompt with an NFC icon and the instruction 'Touch the device with the back of the mobile device.', with a 'Cancel' button at the bottom. The fourth screen shows a 'Successful' confirmation with a checkmark icon.

Notes:


1. NFC function doesn't require any power driver
2. Many functions can be configured by NFC. Kindly check your desired functions.
3. All of our DALI drivers are in the best performance within our DALI master/ gateway

CLO and Corridor DIM(CD) Function Instruction

Step 1: Open APP, and Find the CLO/CD functions

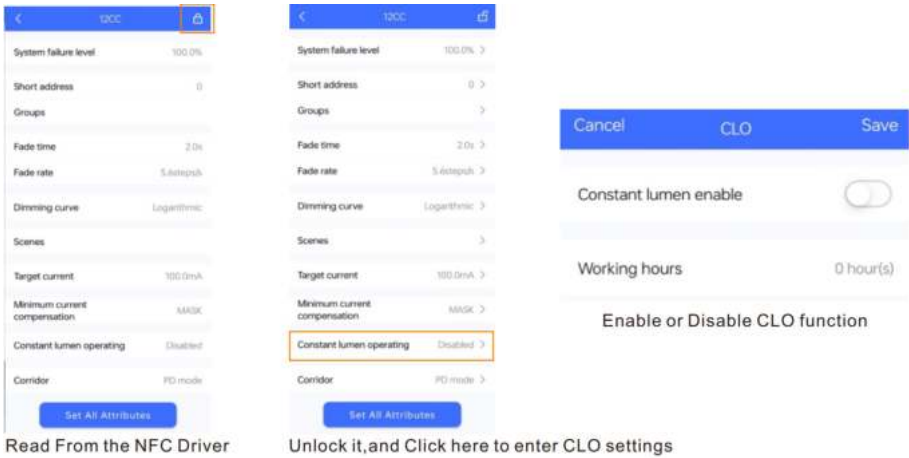


Step 2: Enter CLO Setting homepage

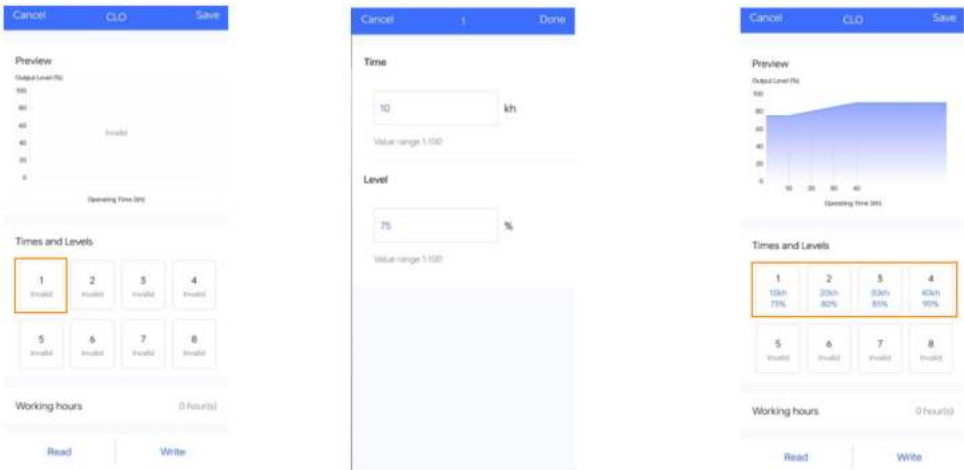

Note:

- 1. Working hours : Ability to calculate the working hours of a single driver

Step 3: Corridor dim(CD) function

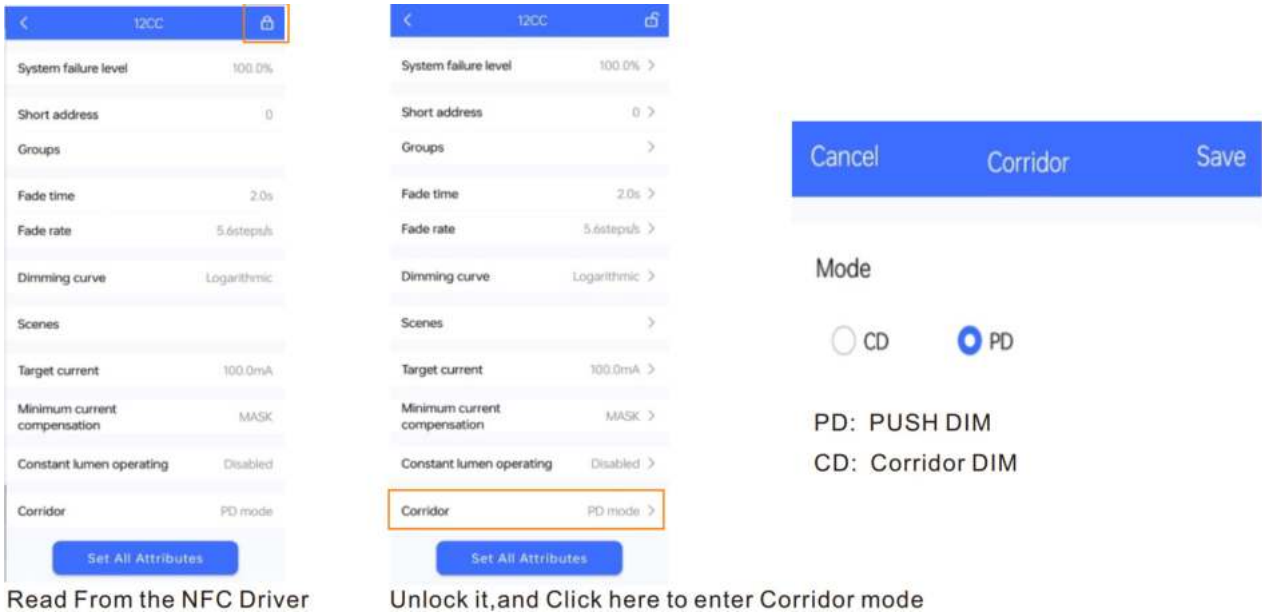

Operation

Step 4: Enter CD Setting homepage

Cancel Corridor Save

Mode

☒ CD ☐ PD

Preview

Level (%)

Fade in Occupied Fade out Prolonged Dim to off

Fade in time

5 s

Value range 0-100

Occupied time

Read Write

Cancel Corridor Save

Occupied time

120 s

Value range 0-60,000

Occupied level

100 %

Value range 0-100

Fade out time

5 s

Value range 0-100

Prolonged time

40 s

Read Write

Cancel Corridor Save

Prolonged time

60 s

Value range 0-60,000

☐ Infinite

Prolonged level

20 %

Value range 0-100

Dim to off time

5 s

Value range 0-100

Read Write

Notes:

1. You should select either CD mode or PD mode, but not both.
2. Under CD mode, you can realize it with normal (3rd party) AC sensor.

Additional Information

More

Write Consecutively ☐

Advanced >

App Version 1.0.10

Check for Update >

Privacy Policy >

Configurations More

1. Please make sure your APP version is 1.0.10 or higher.
2. Please make sure NFC driver's firmware is available with CLO / CD functions