


### SUNRICHER



Compact Constant Current LED Driver with DALI-2 NFC

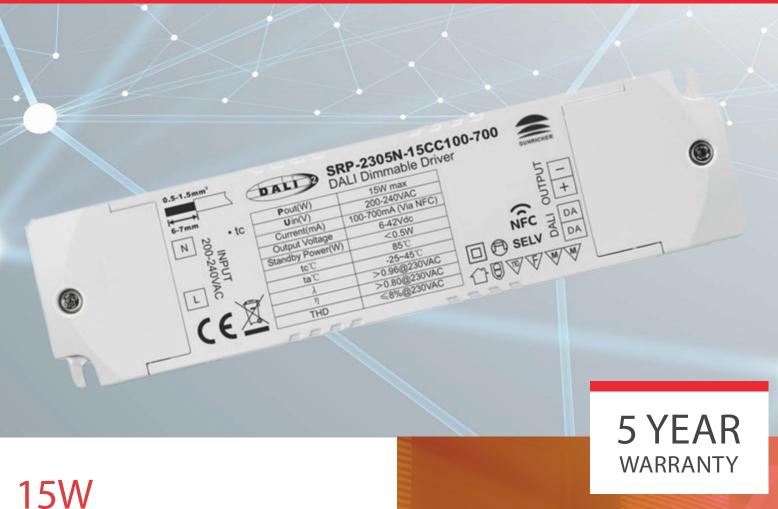


C€ ⊕ ½ •••••• IP20 SELV

# Specification

		SRP-2305N-15CC100-700
	DC Voltage Range	6~42V
Output	Rated current	100-700mA via NFC setting; Min.current gear lower to 0.1mA
	Current Accuracy	±3%(±1%@Certain full load) @ full load
	Rated power	15W
Input	Voltage Range	220-240VAC
	Frequency range	50/60Hz
	Power Factor (Typ.)	> 0.96@230VAC Full load
	Total Harmonic Distortion	THD ≤ 8% (@ full load / 230VAC)
	Efficiency (Typ.)	>80% @ 230VAC full load
	AC Current (Max)	0.1A @ 230VAC
	Inrush Current (Typ.)	Max. 3.96A at 230VAC; 90μs duration
	Leakage current	< 5mA/230VAC
	Standby Power Consumption	<0.5W
	Anti Surge	L-N: 2KV
Control	Dimming Interface	DALI Device Type 6 (DALI consumption < 2mA)/ AC Push
	Dimming Range	0.01%-100%@ Max current
	Dimming Method	Amplitude/CCR dimming
	Dimming Curve	Linear/ Logarithmic optional
Protection	Short Circuit	Yes, recovers automatically after fault condition is removed
	Over Current	Yes, recovers automatically after fault condition is removed
	Over Temperature	Yes, recovers automatically after temperature drop
Environment	Working TEMP.	-25°C ~ +45°C
	Max. Case Temp	TC=85°C (Ta="45°C")
	Working humidity	10%-95% RH (non-condensing)
	Storage TEMP humidity	40°C ~ +80°C, 10% ~ 95% RH
	Safety standards	EN61347-1, EN61347-2-13
Safety & EMC	Withstand voltage	I/P-O/P: 3.75KVAC
	Isolation resistance	I/P-O/P: 100MΩ/500VDC/25°C/70% RH
	EMC emissions	EN55015, EN61000-3-2, EN61000-3-3
	EMC Immunity	EN61547, EN61000-4-2,3,4,5,6,8,11
Others	Size	135*35*20 mm (L*W*H)
	Weight	0.15kgs
	Warranty	5 Years
Notes	1. DO NOT install with power applied	
	2. DO NOT expose the device to mois	ture.

# Mechanical Specification

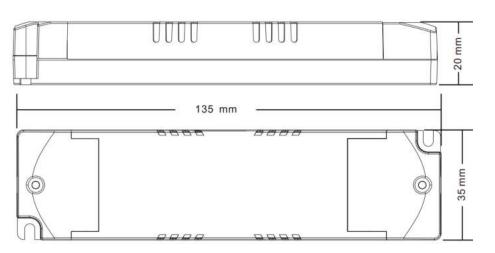


- Input Voltage Terminal: 2 pole terminal (same as the diagram)
- DALI or PUSH Dim Terminals: 2 pole terminals
- Output LED's: 2 pole terminal block: Positive (+), Negative (-)

# **DALI**



# **Push Dimming**

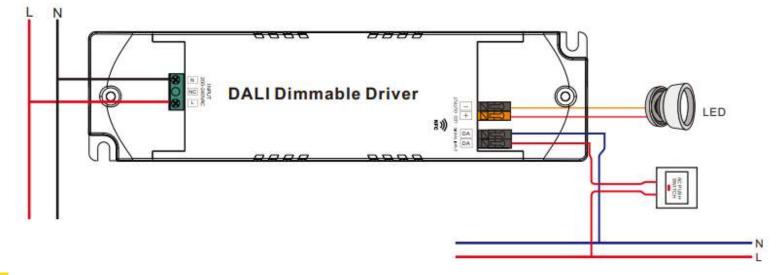

## **Operation**

#### With DALI Master:

- 1. DALI Address
- 1 DALI address for 1 channel output are assigned by DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations


### With NFC Programming Devices:

#### Note:

- 1. Do wiring according to the wiring diagram and power on the DALI system
- 2. Recommend setting parameters without power-on the DALI devices
- 3. Please make sure your mobile phone has NFC function and enable it


### Wiring Diagrams & Dimming

### **Operating Window**

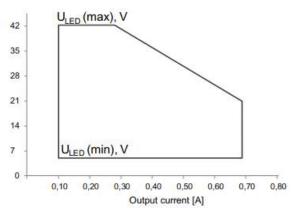


### **Dimming Curve**

Output voltage [V]

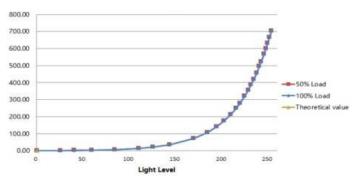


Note: Test data under 700mA gear

### **Driver Performance**

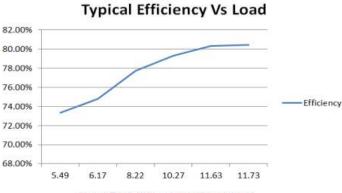

Note: Test data under 700mA gear


#### **Driver Performance**

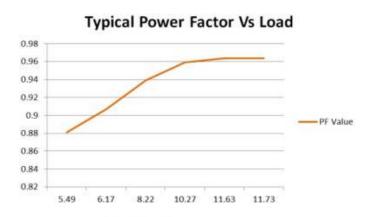

Note: Test data under 700mA gear

### MCB Load Quality

Module Number	Ipeak	Twidth	Max.quantity of LED Driver per MCB														
			B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
SRP-2305N-15CC100-700	3.96A	90µs	37	49	60	75	94	63	81	100	125	156	80	104	128	160	200
SRP-2309N-15CCT100-700	3.96A	90µs	37	49	60	75	94	63	81	100	125	156	80	104	128	160	200

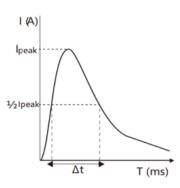

#### Note:


- 1. Those MCB parameters are based on ABB S200 series circuit breakers.
- 2. For different brands and models of miniature circuit breakers, the quantity of drivers will have difference.
- 3. Please do not exceed the above-mentioned quantity during on-site installation, and the specific load quantity shall be subject to on-site installation.
- 4. When the installation environment temperature of MCBs exceeds 30°C or when multiple MCBs are installed side by side, the number of mounted drives will be reduced, which requires
- 5.Type C MCB's are strongly recommended to use with LED lighting

# Operation - Working with 'SR NFC Tool' App

### Step 1: Download the APP (searching "SR NFC Tool" from App Store and Google Play). Open APP.





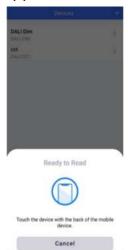

#### Note:

- Please make sure that you have enabled NFC function with your mobile phone/ tablet.
- Please make sure that the "NFC position" is matched.
- Please do not power on the device before 3. setting.
- Please If you can't download "SR NFC Tool". Please contact with us
  - Please refer to QR code below

Step 2: Add device, and name it as you wish.










**Apple QR Code:** 

Android QR Code:

Step 3: Unlock device, enter parameters configuring page.

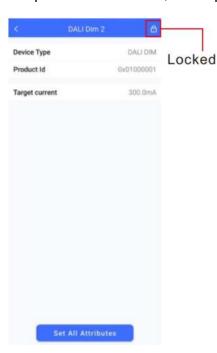

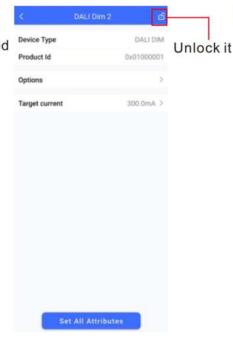

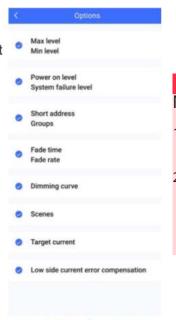


#### Notes:


- You have to unlock the device then do some settings
- Only when the corresponding function is selected, the function interface will be displayed.

# Operation


Step 4: Few parameter interface, you can choose the setting based on your requirements.

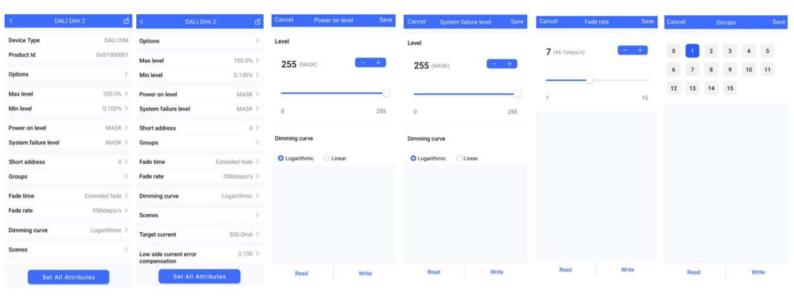

### Step 5: After setting, please save the selected configuration via NFC and power on the device

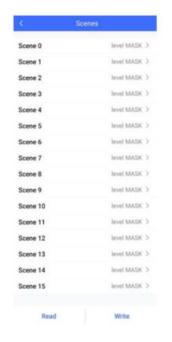



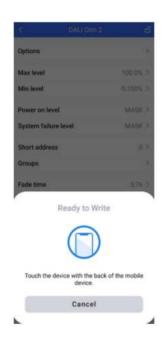




#### Notes:


- 1. NFC function doesn't require any power driver
- 2. Many functions can be configured by NFC. Kindly check your desired functions.
- 3. All of our DALI drivers are in the best performance within our DALI master/ gateway

# CLO and Corridor DIM(CD) Function Instruction

### Step 1: Open APP, and Find the CLO/CD functions

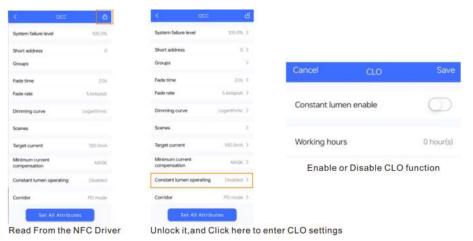

Step 2: Enter CLO Setting homepage

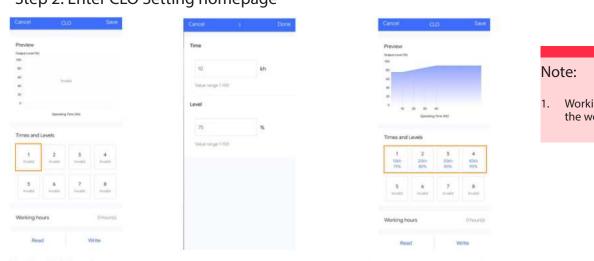


. Working hours : Ability to calculate the working hours of a single driver

Enable CLO function

Click "1", and set its time and level

Set your desired time and levels. Graphic display


#### Step 3: Corridor dim(CD) function

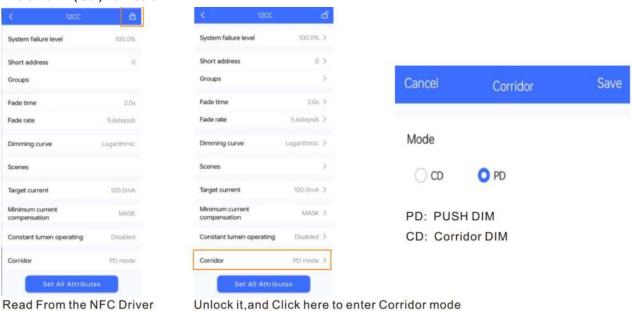

# Operation

### Step 4: Enter CD Setting homepage



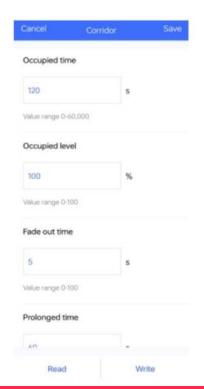




#### Notes:

- You should select either CD mode or PD mode, but not both.
- Under CD mode, you can realize it with normal (3rd party) AC sensor.

# **Additional Information**

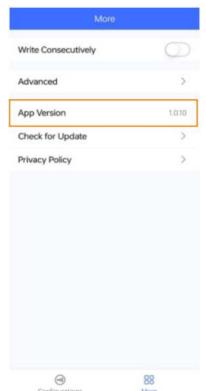

- 1. Please make sure your APP version is 1.0.10 or higher.
- 2. Please make sure NFC driver's firmware is available with CLO / CD functions